

Washability on Textiles

Textile washability test with standard washable fiber pen inks and superwashable fiber pen inks (WASH-IT)


Test Method

- *Spot the woven under analysis with a bright line mark using the fiber pen whose colour has to be tested. Let the tissue soak the colour for 8 hours and then cut the sample into two parts. One of them will be washed and the other part will be used for the final comparison.*
- *Wash one of the two parts in water at 40° added with 1% of detergent and leave it to soak for 30 minutes. After this time rinse it with running water and compare it with the other part which is still spotted.*
- *Repeat the operation once again if you are not fully satisfied with the final result. If the washability test keeps giving negative results also for the second time, it means that the colours shall be considered not washable.*

Washability on Textiles

Superwashable Inks (Wash-it)

Before

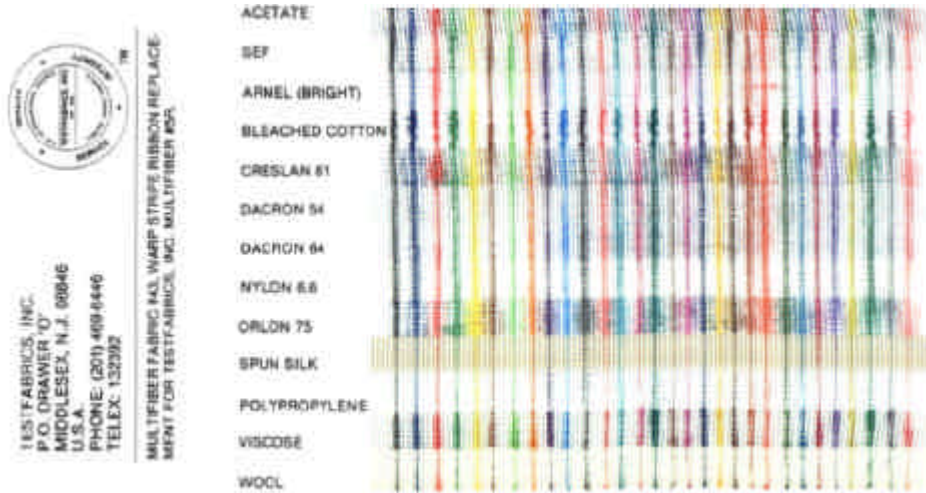


After



Washability on Textiles

Standard Fiber Pen Inks

Before

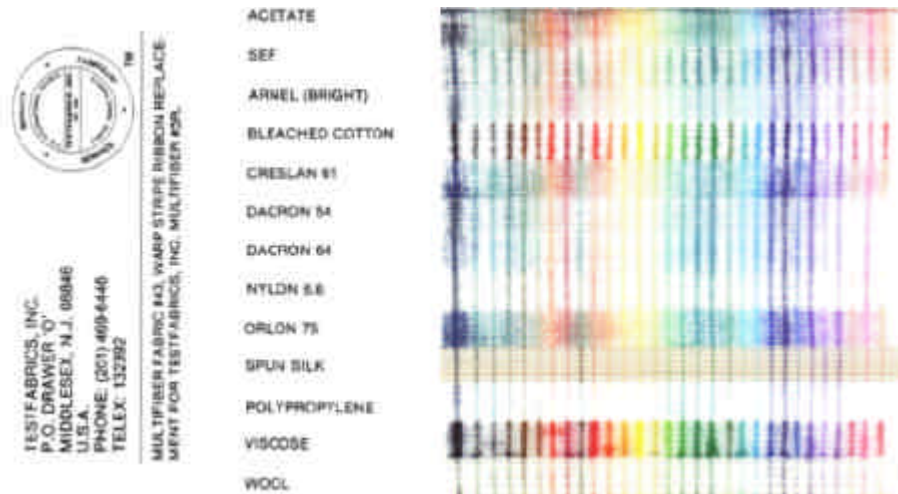

After

